

This document is designed to get you started with the iBX410 digital signage player. A <u>tutorial video</u> is also available to guide you through the installation of your player.



A. CONNECT YOUR PLAYER TO THE SCREEN

The iBX410 supports HDMI 2.0. This means that you can connect your player to any display that has an HDMI slot.

Connect via HDMI

To connect the player to your screen via HDMI, you need a display with an HDMI connector and an HDMI cable (not included).

STEP 1:

Connect one end of the video cable to the HDMI port of your player.

STEP 2

Connect the other end of the HDMI cable to the HDMI port of the display.



B. CONNECT YOUR PLAYER TO THE NETWORK

To connect your player to the network, you need an Ethernet cable (not included).

STEP 1:

Connect one end of the Ethernet cable to the Ethernet port of your player.

STEP 2

Connect the other end of the Ethernet cable to the network.



C. CONNECT TO POWER

The player is powered by its power delivery unit.

STEP 1:

Connect the lockable power connector attached to the PDU to the power port (marked with the DC symbol).

STEP 2:

Connect the detachable cable to the PDU, then plug it into a power outlet.

STEP 3:

Press the player power button.

STEP 4:

Switch on the screen.




Page 1 ______ spinetix.com



D. SET UP YOUR PLAYER IN SPINETIX ARYA



Go to arya.spinetix.cloud/setup and create your SpinetiX ARYA account or sign in if you already have one.

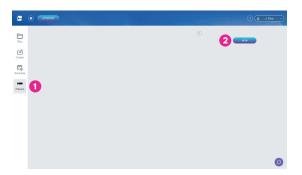



- STEP 1: Go to «Players».
- STEP 2: Click on «NEW».
- STEP 3: Enter the serial number of your player.
- STEP 4: Name your player.
- **STEP 5:** Choose the screen orientation.
- **STEP 6:** Choose your time zone.

Wait for the player to reboot.

You can now start using your iBX410 player with SpinetiX ARYA.

The Live Chat service, available on both the SpinetiX ARYA platform and the SpinetiX Support Wiki, is accessible from Monday to Friday, between 6 AM and 11 PM (UTC+0), to offer you additional support whenever needed.



Live chat ______



https://support.spinetix.com/wiki

Page 2 spinetix.com